

Distributed Exclusively by



Owner's Manual



Please read **entire** owner's manual before attempting to assemble or operate Kwik-Lift.

Please retain this manual and refer to it often.





Kwik-Lift slopes slightly from front to rear. Always use wheel chocks, and/or other chock device. **Always** set the parking brake.

<u>Never</u> exceed Maximum Rated Weight Capacity - This varied depending on Kwik-Lift you purchased. <u>Never</u> exceed capacity.

Use Kwik-Lift only on flat, level, concrete or hardened asphalt surfaces. Surface should be free of any debris which may keep your floor jack from rolling as the lift is raised. If the jack cannot roll freely, there is the potential for the lift tube to slip off of the jack saddle. Avoid using you Kwik-Lift on grass, dirt, gravel, or other soft surfaces.

Drive on and off Kwik-Lift at a **very slow speed**. Position tires 1-2 inches from front leg safety stops.

Adjust distance between ramps to fit centerlift bridge, or your vehicle ifnot using the bridge.


Lower Kwik-Lift onto rear legs very slowly. Repeated sudden drops onto legs with a vehicle on lift may cause safety stop failure.

Always lower jack slowly. Keep hands and feet clear of lift.

Keep others clear of lift when raising and lowering.



CONTENTS PAGE

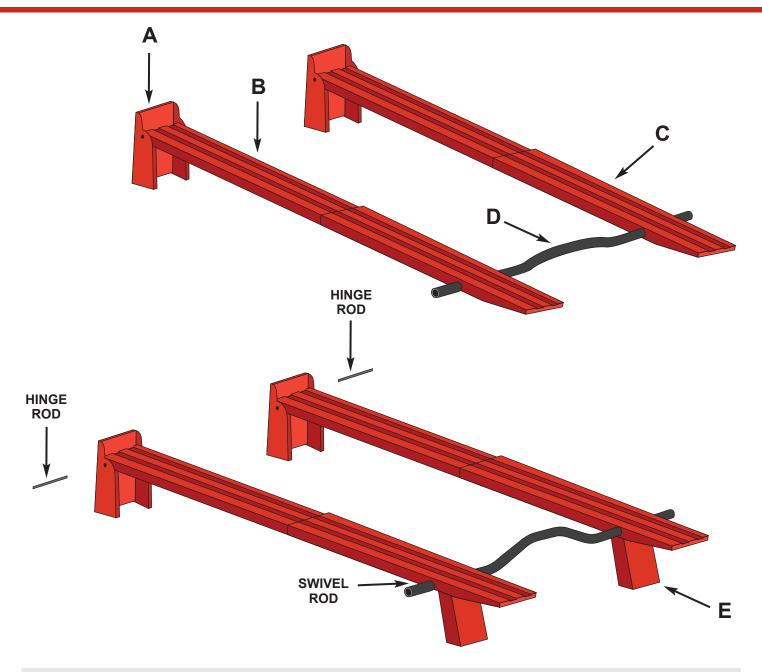

- A Front Legs (2)
- **B** Front Ramp (2)
- C Rear Ramp and Rear Leg Assembly (2)
- **D** Lift Tube (1)
- **E** Rear Leg (attached to rear ramp) (2)
- 24" Hinge Rods (2)
- 24" Swivel Rod (1)
- Hardware Kit (1) Includes 8 bolts, 8 washers, 8 nuts and two clips

Kwik-Lift

ASSEMBLY INSTRUCTIONS

Step 1.

Lay out Kwik-Lift ramp sections as shown. (See Figure 1) Open side facing up. **NOTE:** Spring Loaded Lock Pins on Rear Ramps should be toward the inside.

Step 2.

Slide front and rear ramp section together to desired length aligning 4 holes. (Three lengths available) Bolt ramps together using 4 bolts, 8 washers and 4 nuts. Tighten. Repeat process for the other side.

Step 3.


Flip assembled ramp sections over (open side down). **NOTE:** now Spring Loaded Lock Pins on Rear Ramps should be toward the outside. (See Figure 2)


Step 4.


Slide assembled Ramp Sections (now bolted together and open side facing down) over Lift Tube. Apply grease to the inside of Ramp Tube. **HINT:** Slide each ramp over tube 2-3 inches and then elevate lift tube slightly with floor jack at center of tube. Ramps will now slide on easily. (See Figure 2)

Step 5.

Lift ramp at front. Position the front leg under ramp. (See Figure 3) Ramp will rest on support shelf. Install hinge rod through the front leg and front ramp and secure with clip. Repeat for the other side.

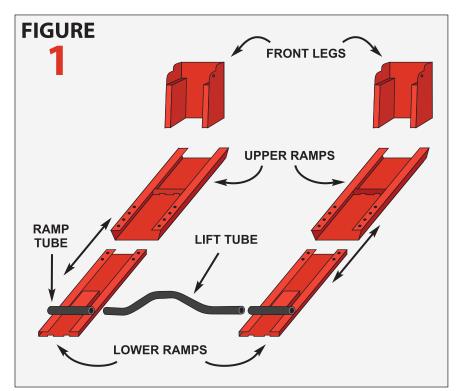

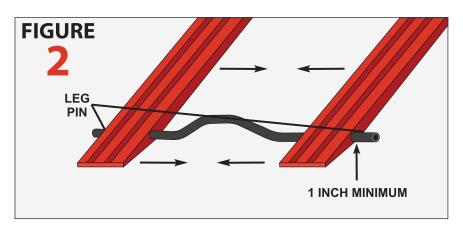

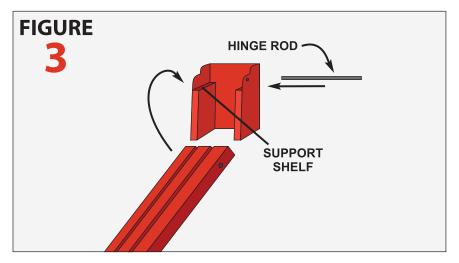

Kwik-Lift

OPERATING INSTRUCTIONS

Step 1.

Place Lift Tube in the "DOWN" position. Align ramp width with the width of front tires. (See Figure 4)

Step 2.

Drive on Kwik-Lift at slow speed. Position front tires within 1 to 2 inches of Front Safety Stops.

Step 3.

Place transmission in park or low gear (manual trans). Set parking brake. Exit car.

Step 4.

Place wheel chocks behind tires. Scotch tightly. Pivot Lift Tube to the "UP" position.

Step 5.

Roll floor jack under center of lift tube. Use jack with 4 inch or larger saddle. Position "TEETH" 2 in front and 2 behind lift tube. (Make certain that jack is designed to accommodate the weight of your vehicle and the Kwik-lift. (Refer to the specifications from the jack manufacturer.

Step 6.


Make certain that jack is securely positioned under lift tube. Jack up unit to 19" height. Pull spring loaded lock pin on rear ramp and lower rear leg. Push leg back beyond vertical position, to a rearward angle, locking leg in place. Repeat process for other side. (CAUTION - MAKE CERTAIN THAT REAR LEGS ARE LOCKED SECURELY IN THE REARWARD POSITION)


Step 7.


Lower jack very slowly until rear legs are securely on floor. (CAUTION - REPEATED SUDDEN DROPS ONTO REAR LEGS WITH VEHICLE ON LIFT COULD RESULT IN REAR LEG FAILURE OR REAR LEG SAFETY STOP FAILURE)

Step 8.

Kwik-lift is now ready for use, enjoy.

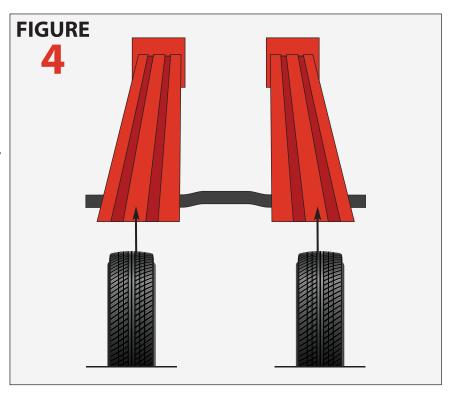

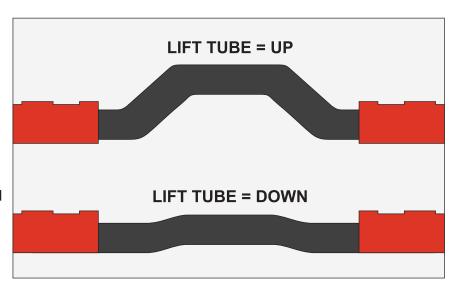

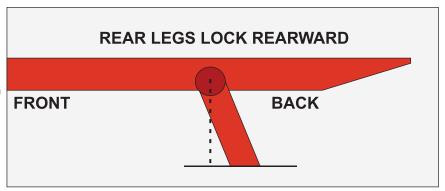




A CAUTION

If your floor jack has shallow "TEETH" on the jack saddle, you should consider replacing your jack with one that has a deeper saddle between the teeth. The tube should be positioned so that two of the teeth in front of the tube and two are behind.

If your tire or Kwik-Lift ramps are wet and your tires should spin while driving on, a non-skid tape may be applied. Non-skid tape is available at most local hardware stores.

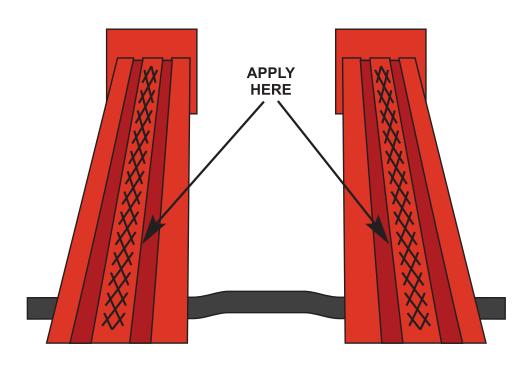



CENTERLIFT BRIDGE INSTRUCTIONS

The bridge is designed for use with bottle jack or other small jack and jack stands to allow wheel and tire removal.

Step 1.

Adjust width of ramps to fit bridge width. (Use inside "V" groove on ramps as guide)

Step 2.

Position at front or rear axle location.


Step 3.

Center punch and drill holes at desired location.

Step 4.

Install nuts and bolts.

Bridge may be used for front or rear wheel and tire removal. May also be used to support rear of engine during transmission removal.

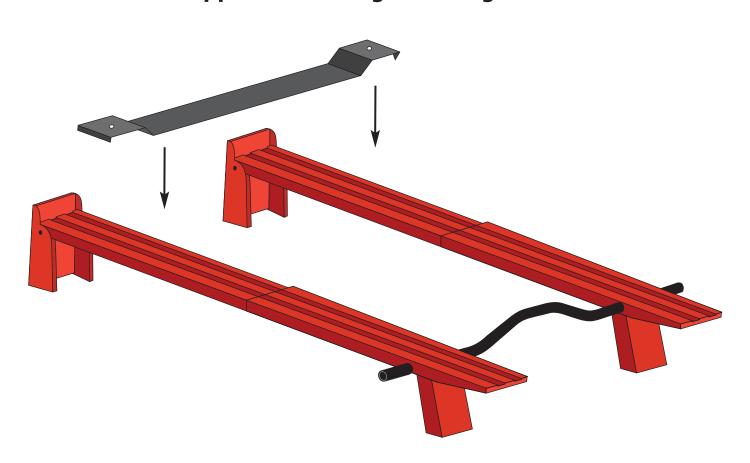




TROUBLESHOOTING GUIDE

Problem:

Lift slides when driving on.

Solution:

Place rubber mats under rear of lift. Rubber door mats work great. (See drawing below)

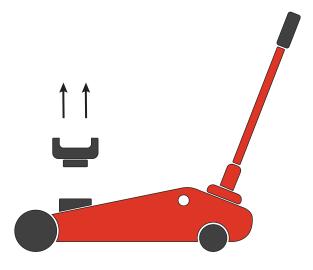

Problem:

Floor Jack won't fit under lift tube.

Solution:

Remove jack saddle. Slide jack under lift and raise rear of lift 2 inches. Place wooden blocks under lift at location of rear legs. Lower lift onto wooden blocks. Replace jack saddle on jack. Place jack under tube and jack up lift. Reverse process for lowering. (See drawing)

LAY FLAT INSTRUCTIONS & RAMP CONSTRUCTION PLANS

Laying your new Kwik-Lift flat to park on is an easy process.


You will need just a few simple tools to construct the ramps and supports needed to accomplish this.


Tools Needed


- Hand saw or Skill saw
- Hammer
- Carpenters Clamps


Materials Needed


- 2" x 6" x 8' boards (Qty. 2)
- 2" x 4" x 8' boards (Qty. 2)
- Carpenter's glue and screws

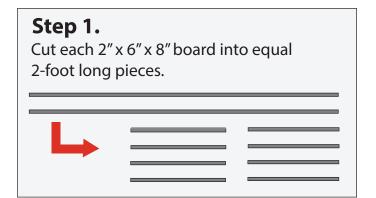

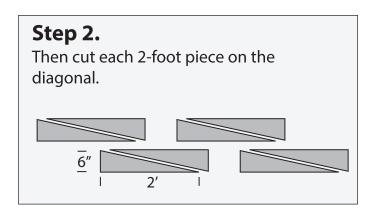

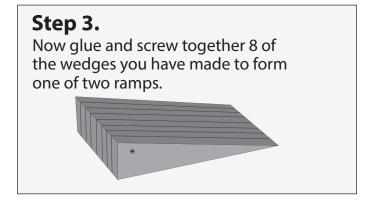

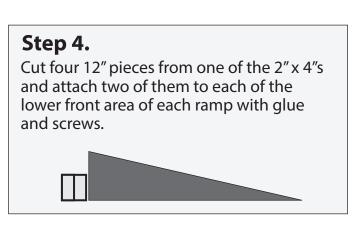

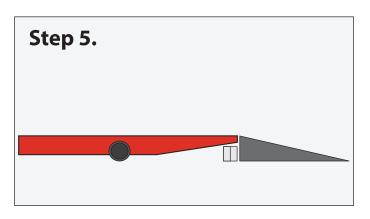

LIMITED WARRANTY

Seller makes the following limited warranty. This limited warranty extends only to the original consumer/purchaser ("Consumer") of the KWIK-LIFT ("Product") and is not assignable or transferable to *any* subsequent purchaser/end user.

Limited Five 5 Year Warranty

Seller warrants the product to be free from defects in material and workmanship for a period of five (5) years after the date of original retail purchase. During the limited warranty period, Seller will repair, or replace, at Sellers option, *any* defective product or parts, or *any* parts that will not properly operate for their intended use with new or factory rebuilt replacement items. No charge will be made to the Consumer for *any* such parts. Seller will also pay for the labor charges incurred by Seller in repairing or replacing the defective parts. The Consumer shall bear the costs of shipping the Product to the seller or to Seller's Authorized Service Center. Seller shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.

Owner's Manual and Warranty Registration

Consumer should read the owner's manual thoroughly before operating the Product. Consumer should also insure that Consumer's name and address are on file as owners of the Product by completing and mailing the attached registration card within ten days after Consumer purchased the Product. This is one way to enable Seller to establish the date of purchase of the Product, as well to provide Consumer with better customer service and improved products. Failure to return the card will not affect Consumer's rights under this warranty so long as Consumer retains other proof of purchase, such as a bill of sale.

Consumer's Responsibilities

The above warranties are subject to the following conditions;

- 1. Consumer must retain Consumer's bill of sale or provide other proof of purchase. Completing and mailing the attached registration card within ten days after the original retail purchase is one way of providing such proof of purchase.
- 2. Consumer must notify Seller within thirty (30) days after Consumer discovers a defective product or part.
- 3. All warranty servicing of this Product must be made by the Seller or Seller's Authorized Service Agent.
- 4. These warranties are effective only if this Product is purchased and operated in the U.S.A.
- 5. Warranties extend only to defects in materials or workmanship as limited above and do not extend to any products or parts which have been lost or discarded by Consumer or to damage to products or parts caused by misuse, accident, improper installation, improper maintenance or use in violation of instructions furnished by Seller, or to units which have been altered or modified without authorization of Seller or damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Step-By-Step Procedures How to Obtain warranty Service

To obtain warranty service, Consumer should:

- 1. Contact Seller for warranty service within thirty (30) days after Consumer discovers a defective product or part.
- 2. Arrange for the delivery of the Product to Seller or Seller's Authorized Service Station. Products shipped to Seller or Seller's Authorized Service Station must be insured and safely and securely packed, preferably in the original shipping carton, together with a letter explaining the defect and a copy of the bill of sale or other proof of purchase. All transportation and insurance charges must be prepaid by Consumer
- 3. If Consumer has any questions about service, please contact Seller at the address given below:

Sam's 4x4 4345 South West Blvd Tulsa, OK 74107 918-258-8492

SELLER MAKES NO WARRANTY THAT THE GOODS SOLD HEREUNDER SHALL BE MERCHANTABLE OR THAT SUCH GOODS SHALL BE FIT FOR ANY PARTICULAR PURPOSE. IT IS UNDERSTOOD AND AGREED THAT SELLER'S LIABILITY AND PURCHASER'S SOLE REMEDY, WHETHER IN CONTRACT, UNDER ANY WARRANTY, IN TORT (INCLUDING NEGLIGENCE), IN STRICT LIABILITY OR OTHERWISE SHALL NOT EXCEED THE RETURN OF THE AMOUNT OF THE PURCHASE PRICE PAID BY THE PURCHASER, AND UNDER NO CIRCUMSTANCES SHALL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, PERSONAL INJURY, PROPERTY DAMAGE, DAMAGE TO OR LOSS OF EQUIPMENT, LOST PROFITS OR REVENUE, COSTS OF RENTING REPLACEMENTS AND OTHER ADDITIONAL EXPENSES, EVEN IF SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE PRICE STATED FOR THE EQUIPMENT IS A CONSIDERATION IN LIMITING SELLER'S LIABILITY AND PURCHASER'S REMEDY. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to Consumer.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of Seller arising under this warranty or under any statue, or law of the United States or any state thereof, is hereby limited to one year from the date Consumer discovers or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which Consumers *may* bring action beyond the limits provided by state law so the above provision may not apply to Consumer. This warranty gives Consumer specific legal rights and Consumer *may* also have other rights which vary from state to state.

ONE YEAR WARRANTY ON POWDERCOATING

WARRANTY REGISTRATION

(Please fill out form completely)

Name			
Address			
City		ST	ZIP
Phone		Date of Pu	rchase
Where did you purchase _			
Types of vehicles to be us	ed on Kwik-Lift:		
I have read and understar cautions, and warnings.	nd the Owner's Ma	nual and all	pertinent instructions,
Signature			Date
	KWIK-LIFT WITH RCHASE OUR FAC		HIBATOR IF YOU DID NOT TING
Please share with us the ralso benefit from the quali	•		few friends you believe would a Kwik-Lift.
1			
2			
			or comments, please give us a
Mail this form to:	Sam's 4345 South V Tulsa, OK	West Blvd	